


PIN CONFIGURATION

Package Code B: 60-ball TF-BGA (top view)

(8mm x 13mm Body, 0.8mm x 1.0mm Ball Pitch)

Top View

(Balls seen through the package)

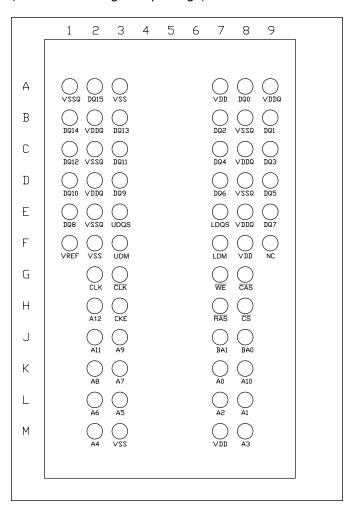


PIN DESCRIPTION: for x16

A0-A12	Row Address Input
A0-A8	Column Address Input
BA0, BA1	Bank Select Address
DQ0 - DQ15	Data I/O
CLK, CLK	System Clock Input
CKE	Clock Enable
<u>cs</u>	Chip Select
CAS	Column Address Strobe Command
RAS	Row Address Strobe Command

WE	Write Enable
LDM, UDM	Data Write Mask
LDQS, UDQS	Data Strobe
VDD	Power
VDDQ	Power Supply for I/O Pins
VSS	Ground
VSSQ	Ground for I/O Pins
VREF	SSTL_2 reference voltage
NC	No Connection



PIN CONFIGURATIONS 66 pin TSOP - Type II for x8, x16

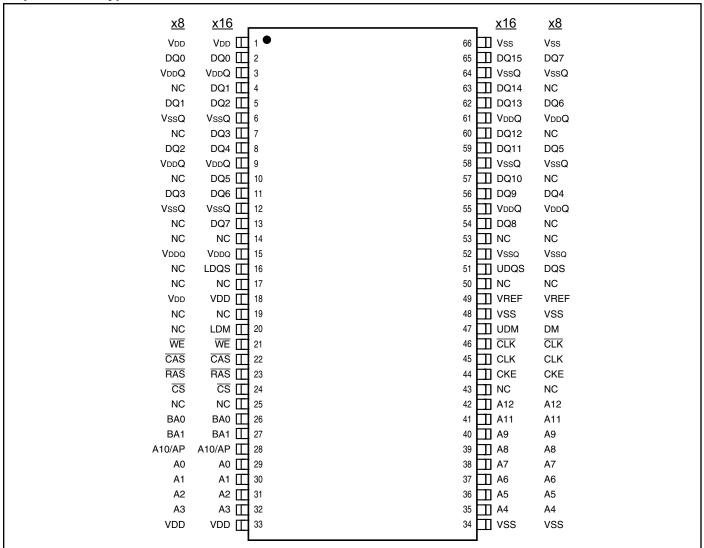

PIN DESCRIPTION:

2 2 3 3 1 1 1 3 .	• • • • • • • • • • • • • • • • • • • •
A0-A12	Row Address Input
A0-A8 (x16) A0-A9 (x8)	Column Address Input
BA0, BA1	Bank Select Address
DQ0 – DQ15 (x16) DQ0 – DQ7 (x8)	Data I/O
CLK, CLK	System Clock Input
CKE	Clock Enable
CS	Chip Select
CAS	Column Address Strobe Command
RAS	Row Address Strobe Command


WE	Write Enable
LDM, UDM (x16) DM (x8)	Data Write Mask
LDQS, UDQS (x16) DQS (x8)	Data Strobe
VDD	Power
VDDQ	Power Supply for I/O Pins
VSS	Ground
VSSQ	Ground for I/O Pins
VREF	SSTL_2 reference voltage
NC	No Connection




PIN FUNCTION

SYMBOL	ТҮРЕ	DESCRIPTION						
CLK, /CLK	Input	Clock: CLK and /CLK are differential clock inputs. All address and control input signals are sampled on the crossing of the positive edge of CLK and negative edge of /CLK. Output (read) data is referenced to the crossings of CLK and /CLK (both directions of crossing).						
СКЕ	Input	Clock Enable: CKE controls internal clock. When CKE is low, internal clock for the following cycle is ceased. CKE is also used to select auto / self refresh. After self refresh mode is started, CKE becomes asynchronous input. Self refresh is maintained as long as CKE is low.						
/CS	Input	Chip Select: When /CS is high, any command means No Operation.						
/RAS, /CAS, /WE	Input	Combination of /RAS, /CAS, /WE defines basic commands.						
A0-12	Input	A0-12 specify the Row / Column Address in conjunction with BA0,1. The Row Address is specified by A0-12. The Column Address is specified by A0-9(x8) and A0-8(x16). A10 is also used to indicate precharge option. When A10 is high at a read / write command, an auto precharge is performed. When A10 is high at a precharge command, all banks are precharged.						
BA0,1	Input	Bank Address: BA0,1 specifies one of four banks to which a command is applied. BA0,1 must be set with ACT, PRE, READ, WRITE commands.						
DQ0-7 (x8), DQ0-15 (x16),	Input / Output	Data Input/Output: Data bus						
DQS (x8) UDQS, LDQS (x16)	Input / Output	Data Strobe: Output with read data, input with write data. Edge-aligned with read data, centered in write data. Used to capture write data. For the x16, LDQS corresponds to the data on DQ0-DQ7; UDQS correspond to the data on DQ8-DQ15						
DM (x8) UDM, LDM (x16)	Input	Input Data Mask: DM is an input mask signal for write data. Input data is masked when DM is sampled HIGH along with that input data during a WRITE access. DM is sampled on both edges of DQS. Although DM pins are input only, the DM loading matches the DQ and DQS loading. For the x16, LDM corresponds to the data on DQ0-DQ7; UDM corresponds to the data on DQ8-DQ15.						
VDD, VSS	Power Supply	Power Supply for the memory array and peripheral circuitry.						
VddQ, Vssq	Power Supply	VDDQ, and VSSQ are supplied to the Output Buffers only.						
Vref	Input	SSTL_2 reference voltage.						



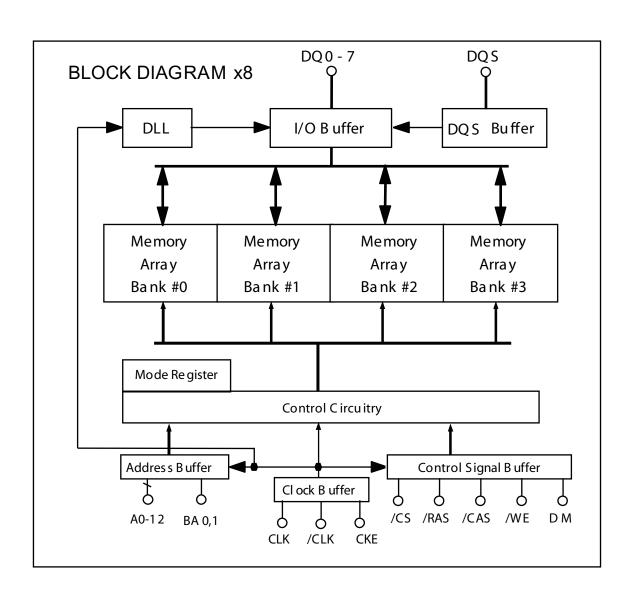




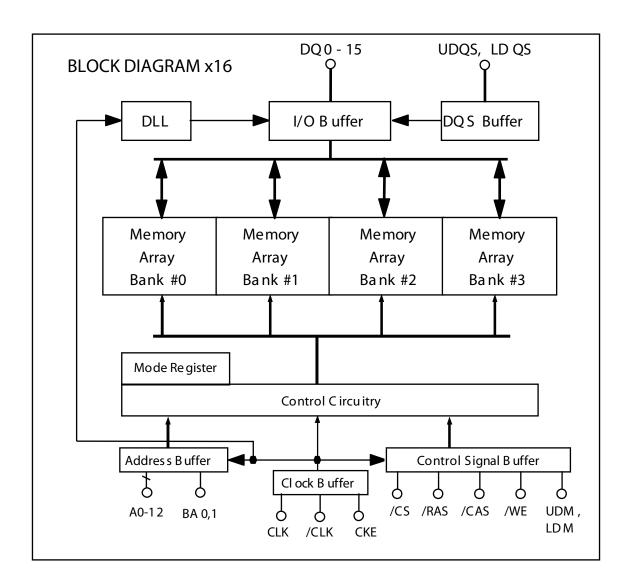



BASIC FUNCTIONS

ISSI's 256-Mbit DDR SDRAM provides basic functions, bank (row) activate, burst read / write, bank (row) precharge, and auto / self refresh. Each command is defined by control signals of /RAS, /CAS and /WE at CLK rising edge. In addition to 3 signals, /CS, CKE and A10 are used as chip select, refresh option, and precharge option, respectively. To know the detailed definition of commands, please see the command truth table.

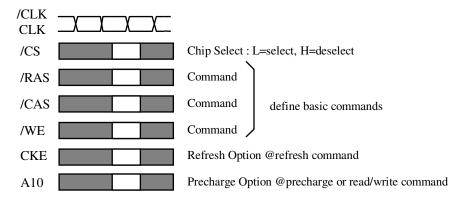

Activate (ACT) [/RAS =L, /CAS =/WE =H]

ACT command activates a row in an idle bank indicated by BA.

Read (READ) [/RAS = H, /CAS = L, /WE = H]

READ command starts burst read from the active bank indicated by BA. First output data appears after /CAS latency. When A10 =H at this command, the bank is deactivated after the burst read (autoprecharge, **READA**)

Write (WRITE) [/RAS =H, /CAS =/WE =L]

WRITE command starts burst write to the active bank indicated by BA. Total data length to be written is set by burst length. When A10 =H at this command, the bank is deactivated after the burst write (auto-precharge, **WRITEA**)

Precharge (PRE) [/RAS =L, /CAS =H, /WE =L]

PRE command deactivates the active bank indicated by BA. This command also terminates burst read /write operation. When A10 =H at this command, all banks are deactivated (precharge all, **PREA**).

Auto-Refresh (REFA) [/RAS =/CAS =L, /WE =CKE =H]

REFA command starts auto-refresh cycle. Refresh address including bank address are generated internally. After this command, the banks are precharged automatically.



COMMAND TRUTH TABLE

COMMAND	MNEMONIC	CKE n-1	CKE n	/CS	/RAS	/CAS	/WE	BA0,1	A10 /AP	A0-9, 11-12	note
Deselect	DESEL	Н	X	Н	X	X	X	X	X	X	
No Operation	NOP	Н	X	L	Н	Н	Н	X	X	X	
Row Address Entry & Bank Activate	ACT	Н	Н	L	L	Н	Н	V	V	V	
Single Bank Precharge	PRE	Н	Н	L	L	Н	L	V	L	X	
Precharge All Banks	PREA	Н	Н	L	L	Н	L	X	Н	X	
Column Address Entry & Write	WRITE	Н	Н	L	Н	L	L	V	L	V	
Column Address Entry & Write with Auto-Precharge	WRITEA	Н	Н	L	Н	L	L	V	Н	V	
Column Address Entry & Read	READ	Н	Н	L	Н	L	Н	V	L	V	
Column Address Entry & Read with Auto-Precharge	READA	Н	Н	L	Н	L	Н	V	Н	V	
Auto-Refresh	REFA	Н	Н	L	L	L	Н	X	X	X	
Self-Refresh Entry	REFS	Н	L	L	L	L	Н	X	X	X	
Self-Refresh Exit	REFSX	L	Н	Н	X	X	X	X	X	X	
Sen-Kenesh Exit	KEFSA	L	Н	L	Н	Н	Н	X	X	X	
Burst Terminate	TERM	Н	Н	L	Н	Н	L	X	X	X	1
Mode Register Set	MRS	Н	Н	L	L	L	L	L	L	V	2

H=High Level, L=Low Level, V=Valid, X=Don't Care, n=CLK cycle number

NOTE:

- 1. Applies only to read bursts with autoprecharge disabled; this command is undefined (and should not be used) for read bursts with autoprecharge enabled, and for write bursts.
- 2. BA0-BA1 select either the Base or the Extended Mode Register (BA0 = 0, BA1 = 0 selects Mode Register; BA0=1, BA1 = 0 selects Extended Mode Register; other combinations of BA0-BA1 are reserved; A0-A12 provide the op-code to be written to the selected Mode Register.



FUNCTION TRUTH TABLE

Current State	/CS	/RAS	/CAS	/WE	Address	Command	Action	Notes
IDLE	Н	X	X	X	X	DESEL	NOP	
	L	Н	Н	Н	X	NOP	NOP	
	L	Н	Н	L	BA	TERM	ILLEGAL	2
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	2
	L	L	Н	Н	BA, RA	ACT	Bank Active, Latch RA	
	L	L	Н	L	BA, A10	PRE / PREA	NOP	4
	L	L	L	Н	X	REFA	Auto-Refresh	5
	L	L	L	L	Op-Code, Mode- Add	MRS	Mode Register Set	5
ROW ACTIVE	Н	X	X	X	X	DESEL	NOP	
	L	Н	Н	Н	X	NOP	NOP	
	L	Н	Н	L	BA	TERM	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ / READA	Begin Read, Latch CA, Determine Auto-Precharge	
	L	Н	L	L	BA, CA, A10	WRITE / WRITEA	Begin Write, Latch CA, Determine Auto-Precharge	
	L	L	Н	Н	BA, RA	ACT	Bank Active / ILLEGAL	2
	L	L	Н	L	BA, A10	PRE / PREA	Precharge / Precharge All	
	L	L	L	Н	X	REFA	ILLEGAL	
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL	
READ(Auto-	Н	X	X	X	X	DESEL	NOP (Continue Burst to END)	
Precharge	L	Н	Н	Н	X	NOP	NOP (Continue Burst to END)	
Disabled)	L	Н	Н	L	BA	TERM	Terminate Burst	
	L	Н	L	Н	BA, CA, A10	READ / READA	Terminate Burst, Latch CA, Begin New Read, Determine Auto- Precharge	3
	L	Н	L	L	BA, CA, A10	WRITE / WRITEA	ILLEGAL	
	L	L	Н	Н	BA, RA	ACT	Bank Active / ILLEGAL	2
	L	L	Н	L	BA, A10	PRE / PREA	Terminate Burst, Precharge	
	L	L	L	Н	X	REFA	ILLEGAL	
	L	Op-Code, Mo		Op-Code, Mode- Add	MRS	ILLEGAL		



FUNCTION TRUTH TABLE (continued)

Current State	/CS	/RAS	/CAS	/WE	Address	Command	Action	Notes
WRITE(Auto-	Н	X	X	X	X	DESEL	NOP (Continue Burst to END)	
Precharge	L	Н	Н	Н	X	NOP	NOP (Continue Burst to END)	
Disabled)	L	Н	Н	L	BA	TERM	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ / READA	Terminate Burst, Latch CA, Begin Read, Determine Auto-Precharge	3
	L	Н	L	L	BA, CA, A10	WRITE / WRITEA	Terminate Burst, Latch CA, Begin Write, Determine Auto-Precharge	3
	L	L	Н	Н	BA, RA	ACT	Bank Active / ILLEGAL	2
	L	L L H L BA			BA, A10	PRE / PREA	Terminate Burst, Precharge	
	L	L	L	Н	X	REFA	ILLEGAL	
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL	
DEAD 3	Н	X	X	X	X	DESEL	NOP (Continue Burst to END)	
READ with Auto-Precharge	L	Н	Н	Н	X	NOP	NOP (Continue Burst to END)	
Auto-Frecharge	L	Н	Н	L	BA	TERM	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ / READA	ILLEGAL	
	L	Н	L	L	BA, CA, A10	WRITE / WRITEA	ILLEGAL	
	L	L	Н	Н	BA, RA	ACT	Bank Active / ILLEGAL	2
	L	L	Н	L	BA, A10	PRE / PREA	Precharge / ILLEGAL	2
	L	L	L	Н	X	REFA	ILLEGAL	
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL	
W/DITE'41-	Н	X	X	X	X	DESEL	NOP (Continue Burst to END)	
WRITE with Auto-Precharge	L	Н	Н	Н	X	NOP	NOP (Continue Burst to END)	
Auto-1 recharge	L	Н	Н	L	BA	TERM	ILLEGAL	
	L	Н	L	Н	BA, CA, A10	READ / READA	ILLEGAL	
	L	Н	L	L	BA, CA, A10	WRITE / WRITEA	ILLEGAL	
	L	L	Н	Н	BA, RA	ACT	Bank Active / ILLEGAL	2
	L	L	Н	L	BA, A10	PRE / PREA	Precharge / ILLEGAL	2
	L	L	L	Н	X	REFA	ILLEGAL	
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL	

IS43R83200B, IS46R83200B IS43R16160B, IS46R16160B



FUNCTION TRUTH TABLE (continued)

Current State	/CS	/RAS	/CAS	/WE	Address	Command	Action	Notes		
PRE-	Н	X	X	X	X	DESEL	NOP (Idle after tRP)			
CHARGING	L	Н	Н	Н	X	NOP	NOP (Idle after tRP)			
	L	Н	Н	L	BA	TERM	ILLEGAL	2		
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	2		
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	2		
	L	L	Н	L	BA, A10	PRE / PREA	NOP (Idle after tRP)	4		
	L	L	L	Н	X	REFA	ILLEGAL			
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL			
DOM	Н	X	X	X	X	DESEL	NOP (Row Active after tRCD)			
ROW ACTIVATING	L	Н	Н	Н	X	NOP	NOP (Row Active after tRCD)			
ACIIVAIINO	L	Н	Н	L	BA	TERM	TERM ILLEGAL			
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	2		
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	2		
	L	L	Н	L	BA, A10	PRE / PREA	ILLEGAL	2		
	L	L	L	Н	X	REFA	ILLEGAL			
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL			
WIDITE DE	Н	X	X	X	X	DESEL	NOP			
WRITE RE- COVERING	L	Н	Н	Н	X	NOP	NOP			
COVERNIVO	L	Н	Н	L	BA	TERM	ILLEGAL	2		
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	2		
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	2		
	L	L	Н	L	BA, A10	PRE / PREA	ILLEGAL	2		
	L	L	L	Н	X	REFA	ILLEGAL			
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL			



FUNCTION TRUTH TABLE (continued)

Current State	/CS	/RAS	/CAS	/WE	Address	Command	Action	Notes
REFRESHING	Н	X	X	X	X	DESEL	NOP (Idle after tRC)	
	L	Н	Н	Н	X	NOP	NOP (Idle after tRC)	
	L H H L BA TERM		TERM	ILLEGAL				
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	
	L	L	Н	L	BA, A10	PRE/PREA	ILLEGAL	
	L	L	L	Н	X	REFA	ILLEGAL	
			Op-Code, Mode- Add	MRS	ILLEGAL			
MODE	Н	X	X	X	X	DESEL	NOP (Row Active after tRSC)	
REGISTER	L	Н	Н	Н	X	NOP	NOP (Row Active after tRSC)	
SETTING	L	Н	Н	L	BA	TERM	ILLEGAL	
	L	Н	L	X	BA, CA, A10	READ / WRITE	ILLEGAL	
	L	L	Н	Н	BA, RA	ACT	ILLEGAL	
	L	L	Н	L	BA, A10	PRE / PREA	ILLEGAL	
	L L L H X		REFA	ILLEGAL				
	L	L	L	L	Op-Code, Mode- Add	MRS	ILLEGAL	

ABBREVIATIONS:

H=High Level, L=Low Level, X=Don't Care

BA=Bank Address, RA=Row Address, CA=Column Address, NOP=No Operation

NOTES:

- 1. All entries assume that CKE was High during the preceding clock cycle and the current clock cycle.
- 2. ILLEGAL to bank in specified state; function may be legal in the bank indicated by BA, depending on the state of that bank.
- 3. Must satisfy bus contention, bus turn around, write recovery requirements.
- 4. NOP to bank precharging or in idle state. May precharge bank indicated by BA.
- 5. ILLEGAL if any bank is not idle.

ILLEGAL = Device operation and/or data-integrity are not guaranteed.



FUNCTION TRUTH TABLE for CKE

Current State	CKE n-1	CKE n	/CS	/RAS	/CAS	/WE	Address	Action	Notes
SELF-	Н	X	X	X	X	X	X	INVALID	1
REFRESHING	L	Н	Н	X	X	X	X	Exit Self-Refresh (Idle after tRC)	1
	L	Н	L	Н	Н	Н	X	Exit Self-Refresh (Idle after tRC)	1
	L	Н	L	Н	Н	L	X	ILLEGAL	1
	L	Н	L	Н	L	X	X	ILLEGAL	1
	L	Н	L	L	X	X	X	ILLEGAL	1
	L	L	X	X	X	X	X	NOP (Maintain Self-Refresh)	1
POWER	Н	X	X	X	X	X	X	INVALID	
DOWN	L	Н	X	X	X	X	X	Exit Power Down to Idle	
	L	L	X	X	X	X	X	NOP (Maintain Self-Refresh)	
ALL BANKS	Н	Н	X	X	X	X	X	Refer to Function Truth Table	2
IDLE	Н	L	L	L	L	Н	X	Enter Self-Refresh	2
	Н	L	Н	X	X	X	X	Enter Power Down	2
	Н	L	L	Н	Н	Н	X	Enter Power Down	2
	Н	L	L	Н	Н	L	X	ILLEGAL	2
	Н	L	L	Н	L	X	X	ILLEGAL	2
	Н	L	L	L	X	X	X	ILLEGAL	2
	L	X	X	X	X	X	X	Refer to Current State =Power Down	2
ANY STATE	Н	Н	X	X	X	X	X	Refer to Function Truth Table	
other than listed	Н	L	X	X	X	X	X	Begin CLK Suspend at Next Cycle	3
above	L	Н	X	X	X	X	X	Exit CLK Suspend at Next Cycle	3
	L	L	X	X	X	X	Х	Maintain CLK Suspend	

ABBREVIATIONS:


H=High Level, L=Low Level, X=Don't Care

NOTES:

- 1. CKE Low to High transition will re-enable CLK and other inputs asynchronously. A minimum setup time must be satisfied before any command other than EXIT.
- 2. Power-Down and Self-Refresh can be entered only from the All Banks Idle State.
- 3. Must be legal command.



SIMPLIFIED STATE DIAGRAM

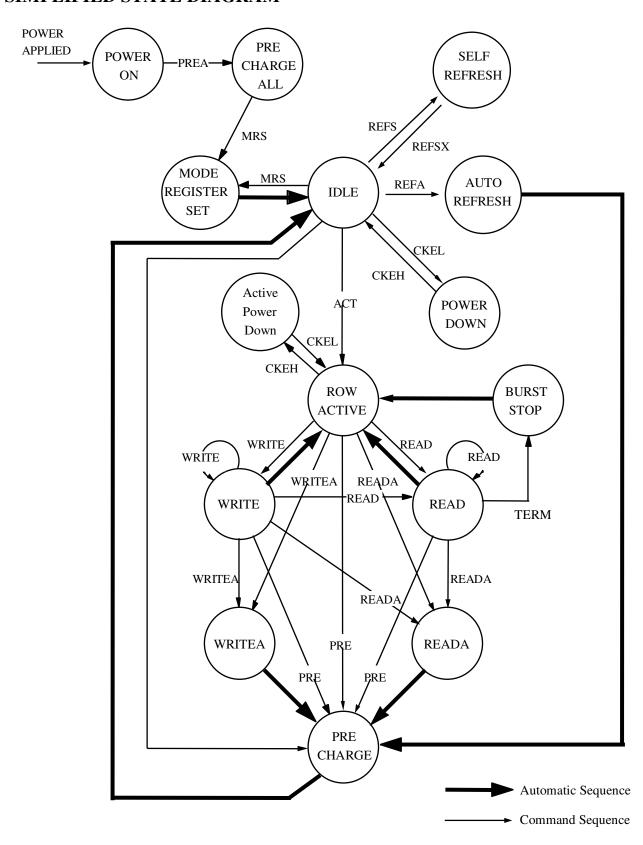




POWER ON SEQUENCE

Before starting normal operation, the following power on sequence is necessary to prevent a SDRAM from damaged or multifunctioning.

- 1. Apply VDD before or the same time as VDDQ
- 2. Apply VDDQ before or at the same time as VTT & Vref
- 3. Maintain stable condition for 200us after stable power and CLK, apply NOP or DSEL
- 4. Issue precharge command for all banks of the device
- 5. Issue EMRS
- 6. Issue MRS for the Mode Register and to reset the DLL
- 7. Issue 2 or more Auto Refresh commands
- 8. Maintain stable condition for 200 cycle


After these sequence, the DDR SDRAM is idle state and ready for normal operation.

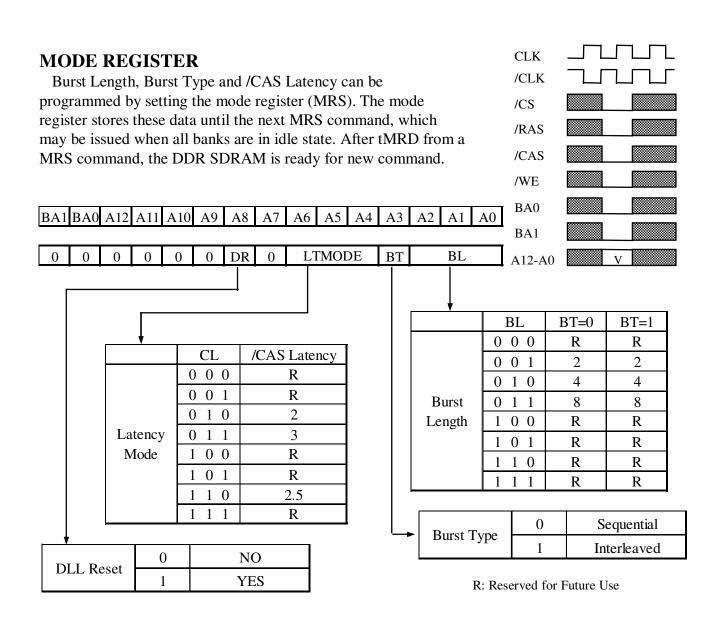




EXTENDED MODE REGISTER

DLL disable / enable mode can be programmed by setting the extended mode register (EMRS). The extended mode register stores these data until the next EMRS command, which may be issued when all banks are in idle state. After tMRD from a EMRS command, the DDR SDRAM is ready for new command.

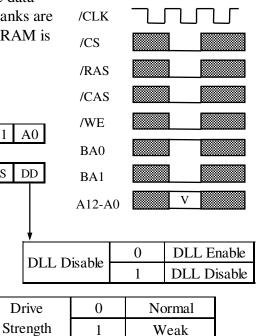

CLK



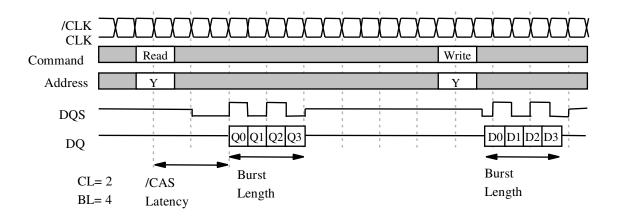

Initia	al Ado	dress	BL		Column Addressing															
A2	A1	A0		Sequential									Interleaved							
0	0	0		0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7	
0	0	1		1	2	3	4	5	6	7	0	1	0	3	2	5	4	7	6	
0	1	0		2	3	4	5	6	7	0	1	2	3	0	1	6	7	4	5	
0	1	1		3	4	5	6	7	0	1	2	3	2	1	0	7	6	5	4	
1	0	0	8	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3	
1	0	1		5	6	7	0	1	2	3	4	5	4	7	6	1	0	3	2	
1	1	0				6	7	0	1	2	3	4	5	6	7	4	5	2	3	0
1	1	1		7	0	1	2	3	4	5	6	7	6	5	4	3	2	1	0	
-	0	0		0	1	2	3					0	1	2	3					
_	0	1		1	2	3	0					1	0	3	2					
-	1	0	4	2	3	0	1					2	3	0	1					
-	1	1		3	0	1	2					3	2	1	0					
-	-	0		0	1							0	1							
-	1	1	2	1	0							1	0							



ABSOLUTE MAXIMUM RATINGS

Symbol	Parameter	Conditions	Ratings	Unit
Vdd	Supply Voltage	with respect to Vss	-0.5 ~ 3.7	V
VddQ	Supply Voltage for Output	with respect to Vssq	-0.5 ~ 3.7	V
VI	Input Voltage	with respect to Vss	-0.5 ~ VDD+0.5	V
VO	Output Voltage	with respect to Vssq	-0.5 ~ VDDQ+0.5	V
IO	Output Current		50	mA
Pd	Power Dissipation	Ta = 25 °C	1500	mW
Topr	Operating Temperature	Commercial Temperature Industrial Temperature Automotive Temperature	0 to 70 -40 to +85 -40 to +85	°C
Tstg	Storage Temperature		-65 ~ 150	°C

DC OPERATING CONDITIONS

(Ta=0 ~ 70° C for Commercial. Ta = -40 ~ +85°C for Industrial and Automotive)

Cramb ol	Parameter		Limits		Unit	Notes
Symbol	Parameter	Min.	Тур.	Max.	Onit	Notes
Vdd	Supply Voltage	2.3	2.5	2.7	V	
VddQ	I/O Supply Voltage	2.3	2.5	2.7	V	
VREF	I/O Reference Volatage	0.49*VddQ	0.5*VddQ	0.51*VddQ	V	
VTT	I/O Termination Voltage	VREF-0.04	VREF	VREF+0.04	V	
VIH(DC)	Input High Voltage	Vref+0.15		Vdd+0.3	V	
VIL(DC)	Input Low Voltage	-0.3		Vref-0.15	V	
VIN(DC)	Input Voltage Level, CK and /CK inputs	-0.3		VddQ+0.3	V	
VID(DC)	Input Differential Voltage, CK and /CK inputs	0.36		VddQ+0.6	V	
IL	Input Leakage Current, Any input 0V <vin<vdd (all="" not="" other="" pins="" test="0V)</td" under=""><td>-2</td><td></td><td>2</td><td>uA</td><td></td></vin<vdd>	-2		2	uA	
IOZ	Output Leakage Current DQs are disabled; 0V <vout<vddq< td=""><td>-5</td><td></td><td>5</td><td>uA</td><td></td></vout<vddq<>	-5		5	uA	
IOH	Output High Current (VOUT=1.95V)	-16.2			mA	
IOL	Output Low Current (VOUT=0.35V)	16.2			mA	

AC OPERATING CONDITIONS


(Ta=0 ~ 70° C for Commercial. Ta = -40 ~ +85°C for Industrial and Automotive) (Vdd = VddQ = 2.5V \pm 0.2V, Vss = VssQ = 0V, unless otherwise noted)

Symbol	Daramatar		Limits		Unit	Notes
Symbol	Symbol Parameter –		Тур.	Max.	Ont	110168
VIH(AC)	Input High Voltage	Vref+0.31			V	
VIL(AC)	Input Low Voltage			Vref-0.31	V	
VID(AC)	Input Differential Voltage, CK and /CK inputs	0.7		VddQ+0.6	V	
VIX(AC)	Input Crossing Point Voltage, CK and /CK inputs	0.5*VddQ-0.2	0.5*VddQ	0.5*VddQ-0.2	V	



AC Overshoot/Undershoot Specification for Address and Control Pins


Parameter	Max.	Unit
Peak amplitude allowed for overshoot	1.5	V
Peak amplitude allowed for undershoot	1.5	V
Area between the overshoot signal and VDD must be less than or equal to	4.5	V-ns
Area between the undershoot signal and GND must be less than or equal to	4.5	V-ns

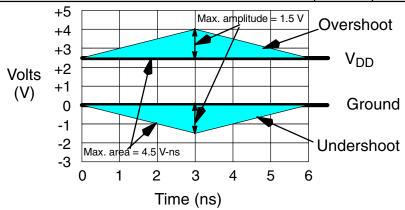

Address and Control AC Overshoot and Undershoot Definition

Overshoot/Undershoot Specification for Data, Strobe, and Mask Pins

Parameter	Max	Unit
Peak amplitude allowed for overshoot	1.2	V
Peak amplitude allowed for undershoot	1.2	V
Area between the overshoot signal and VDD must be less than or equal to	2.4	V-ns
Area between the undershoot signal and GND must be less than or equal to	2.4	V-ns

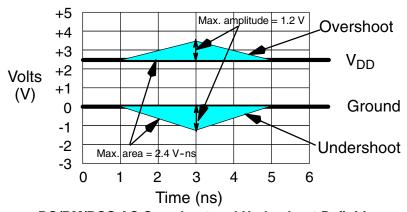

DQ/DM/DQS AC Overshoot and Undershoot Definition



AVERAGE SUPPLY CURRENT from Vdd

 $(Vdd = VddQ = 2.5V \pm 0.2V, Vss = VssQ = 0V, Output Open, unless otherwise noted)$

C1	Parameter/Test Conditions	I	imits(Max	.)	Unit	Notes
Symbol	Parameter/ Test Conditions	-5	-6	-75	Ullit	Notes
IDD1	OPERATING CURRENT: One Bank; Active-Read-Precharge;Burst = 2; t RC = t RC MIN; t CK = t CK MIN; IOUT= 0mA; Address and control inputs changing once per clock cycle	185	165	150		
IDD2P	PRECHARGE POWER-DOWN STANDBY CURRENT: All banks idle; power-down mode; CKE ≤VIL (MAX); t CK = t CK MIN	30	25	20		
IDD2N	IDLE STANDBY CURRENT: /CS ≥ VIH (MIN); All banks idle; CKE ≥ VIH (MIN); t CK = t CK MIN; Address and other control inputs changing once per clock cycle	60	55	50		
IDD3P	ACTIVE POWER DOWN STANDBY CURRENT: One bank active; power down mode; CKE \leq VIL(MAX); t CK = t CK MIN	50	45	40		
IDD3N	ACTIVE STANDBY CURRENT: $/CS \ge VIH$ (MIN); CKE $\ge VIH$ (MIN); One bank; Active-Precharge; t RC = t RAS MAX; t CK = t CK MIN; DQ,DM and DQS inputs changing twice per clock cycle; address and other control inputs changing once per clock cycle	95	90	75	mA	
IDD4R	OPERATING CURRENT: Burst =2; Read; Continuous burst; All banks active; Address and control inputs changing once per clock cycle; t CK = t CK MIN; IOUT = 0 mA	290	250	210		
IDD4W	OPERATING CURRENT: Burst =2; Write; Continuous burst; All banks active; Address and control inputs changing once per clock cycle; CK = t CK MIN; DQ and DQS inputs changing twice per clock cycle	290	250	210		
IDD5	AUTO REFRESH CURRENT: t RC = t RFC (MIN)	170	160	150		
IDD6	SELF REFRESH CURRENT: CKE ≤ 0.2 V	5	5	5		



AC TIMING REQUIREMENTS


	1991		-	5	-	6	-7	75		
Symbol	AC Characteristics Parameter		Min.	Max	Min.	Max	Min.	Max	Unit	Notes
tAC	DQ Output access time from CLK//CLK		-0.70	+0.70	-0.70	+0.70	-0.75	+0.75	ns	
tDQSCK	DQS Output access time from CLK//CLK		-0.6	+0.6	-0.60	+0.60	-0.75	+0.75	ns	
tCH	CLK High level width		0.45	0.55	0.45	0.55	0.45	0.55	tCK	
tCL	CLK Low level width		0.45	0.55	0.45	0.55	0.45	0.55	tCK	
		CL=3.0	5	7.5	6	12	7.5	12	ns	
tCK	CLK cycle time	CL=2.5	5	12	6	12	7.5	12	ns	
		CL=2.0	7.5	12	7.5	12	7.5	12	ns	
tDS	Input Setup time (DQ,DM)		0.4		0.45		0.5		ns	
tDH	Input Hold time(DQ,DM)		0.4		0.45		0.5		ns	
tIPW	Control & address input pulse width (for each input)		2.2		2.2		2.2		ns	
tDIPW	DQ and DM input pulse width (for each input)		1.75		1.75		1.75		ns	
tHZ	Data-out-high impedance time from CLK//CLK			+0.70		+0.70		+0.75	ns	14
tLZ	Data-out-low impedance time from CLK//CLK		-0.70	+0.70	-0.70	+0.70	-0.75	+0.75	ns	14
tDQSQ	DQ Valid data delay time from DQS			0.40		0.45		0.5	ns	
tHP	Clock half period		tCLmin or tCHmin		tCLmin or tCHmin		tCLmin or tCHmin		ns	20
tQH	DQ output hold time from DQS (per access)		tHP-tQHS		tHP-tQHS		tHP-tQHS		ns	
tQHS	Data hold skew factor (for DQS & associated DQ signals)			0.50		0.55		0.75		
tDQSS	Write command to first DQS latching transition		0.72	1.25	0.75	1.25	0.75	1.25	tCK	
tDQSH	DQS input High level width		0.35		0.35		0.35		tCK	
tDQSL	DQS input Low level width		0.35		0.35		0.35		tCK	
tDSS	DQS falling edge to CLK setup time		0.2		0.2		0.2		tCK	
tDSH	DQS falling edge hold time from CLK		0.2		0.2		0.2		tCK	
tMRD	Mode Register Set command cycle time		2		2		2		tCK	
tWPRES	Write preamble setup time		0		0		0		ns	16
tWPST	Write postamble		0.4	0.6	0.4	0.6	0.4	0.6	tCK	15
tWPRE	Write preamble		max (0.25*tck, 1.5ns)		0.25*tck		0.25*tck		ns	
tIS	Input Setup time (address and control)		0.6		0.75		0.9		ns	19
tIH	Input Hold time (address and control)		0.6		0.75		0.9		ns	19
tRPST	Read postamble		0.4	0.6	0.4	0.6	0.4	0.6	tCK	
tRPRE	Read preamble		0.9	1.1	0.9	1.1	0.9	1.1	tCK	




AC TIMING REQUIREMENTS(Continues)

Symbol	AC Characteristics Parameter		-5		-6	-	75	Unit	Notes
Symbol	AC Characteristics Farameter	Min.	Max	Min.	Max	Min.	Max	Oilit	Notes
tRAS	Row Active time	40	120,000	42	120,000	45	120,000	ns	
tRC	Row Cycle time(operation)	55		60		65		ns	
tRFC	Auto Ref. to Active/Auto Ref. command period	70		72		75		ns	
tRCD	Row to Column Delay	15		18		20		ns	
tRP	Row Precharge time	15		18		20		ns	
tRRD	Act to Act Delay time	10		12		15		ns	
tWR	Write Recovery time	15		15		15		ns	
tDAL	Auto Precharge write recovery + precharge time	_		_		-		tCK	21
tWTR	Internal Write to Read Command Delay	2		1		1		tCK	
tXSNR	Exit Self Ref. to non-Read command	75		75		75		ns	
tXSRD	Exit Self Ref. to -Read command	200		200		200		tCK	
tXPNR	Exit Power down to command	1		1		1		tCK	
tXPRD	Exit Power down to -Read command	1		1		1		tCK	18
tREFI	Average Periodic Refresh interval		7.8		7.8		7.8	μs	17

Output Load Condition

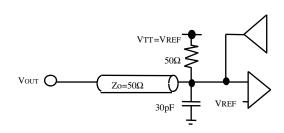

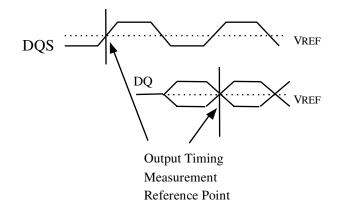

CAPACITANCE

 $(Ta=25^{\circ}C, Vdd = VddQ = 2.5V \pm 0.2V \ Vss = VssQ = 0V, unless \ otherwise \ noted)$

Symbol	Parameter	Test Condition	Liı	mits	Delta	Unit	Notes
Symbol	r at attletet	Test Collabor	Min.	Max.	Cap.(Max.)	Ullit	Notes
CI(A)	Input Capacitance, address pin	VI=1.25v	1.3	2.5	0.75	pF	
CI(C)	Input Capacitance, control pin	f=100MHz	1.3	2.5	0.73	рF	
CI(K)	Input Capacitance, CLK pin	VI=25mVrms	1.3	2.5	0.25	pF	
CI/O	I/O Capacitance, I/O, DQS, DM pin		2	4	1.3	pF	


IS43R83200B, IS46R83200B IS43R16160B, IS46R16160B




Notes

- 1. All voltages referenced to Vss.
- 2. Tests for AC timing, IDD, and electrical, AC and DC characteristics, may be conducted at nominal reference/supply voltage levels, but the related specifications and device operation are guaranteed for the full voltage range specified.
- 3. AC timing and IDD tests may use a VIL to VIH swing of up to 1.5V in the test environment, but input timing is still referenced to VREF (or to the crossing point for CK//CK), and parameter specifications are guaranteed for the specified AC input levels under normal use conditions. The minimum slew rate for the input signals is 1V/ns in the range between VIL(AC) and VIH(AC).
- 4. The AC and DC input level specifications are as defined in the SSTL_2 Standard (i.e. the receiver will effectively switch as a result of the signal crossing the AC input level, and will remain in that state as long as the signal does not ring back above (below) the DC input LOW (HIGH) level.
- 5. VREF is expected to be equal to 0.5*VddQ of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on VREF may not exceed +2% of the DC value.
- 6. VTT is not applied directly to the device. VTT is a system supply for signal termination resistors, is expected to be set equal to VREF, and must track variations in the DC level of VREF.
- 7. VID is the magnitude of the difference between the input level on CLK and the input level on /CLK.
- 8. The value of VIX is expected to equal 0.5*VddQ of the transmitting device and must track variations in the DC level of the same.
- 9. Enables on-chip refresh and address counters.
- 10. IDD specifications are tested after the device is properly initialized.
- 11. This parameter is sampled. $VddQ = 2.5V \pm 0.2V$, $Vdd = 2.5V \pm 0.2V$, f = 100 MHz, $Ta = 25^{\circ}C$, VOUT(DC) = VddQ/2, $VOUT(PEAK\ TO\ PEAK) = 25mV$. DM inputs are grouped with I/O pins reflecting the fact that they are matched in loading (to facilitate trace matching at the board level).
- 12. The CLK//CLK input reference level (for timing referenced to CLK//CLK) is the point at which CLK and /CLK cross; the input reference level for signals other than CLK//CLK, is VREF.
- 13. Inputs are not recognized as valid until VREF stabilizes. Exception: during the period before VREF stabilizes, CKE< 0.3VddQ is recognized as LOW.
- 14. t HZ and tLZ transitions occur in the same access time windows as valid data transitions. These parameters are not referenced to a specific voltage level, but specify when the device output is no longer driving (HZ), or begins driving (LZ).
- 15. The maximum limit for this parameter is not a device limit. The device will operate with a greater value for this parameter, but system performance (bus turnaround) will degrade accordingly.
- 16. The specific requirement is that DQS be valid (HIGH, LOW, or at some point on a valid transition) on or before this CLK edge. A valid transition is defined as monotonic, and meeting the input slew rate specifications of the device. When no writes were previously in progress on the bus, DQS will be transitioning from High-Z to logic LOW. If a previous write was in progress, DQS could be HIGH, LOW, or transitioning from HIGH to LOW at this time, depending on tDQSS.
- 17. A maximum of eight AUTO REFRESH commands can be posted to any given DDR SDRAM device.
- 18. tXPRD should be 200 tCLK in the condition of the unstable CLK operation during the power down mode.
- 19. For command/address and CK & /CK slew rate > 1.0V/ns.
- 20. Min (tCL,tCH) refers to the smaller of the actual clock low time and the actual clock high time as provided to the device.
- 21. tDAL minimum = (tWR/tCK) + (tRP/tCK)
- If either addend is not an integer, it should be rounded up.




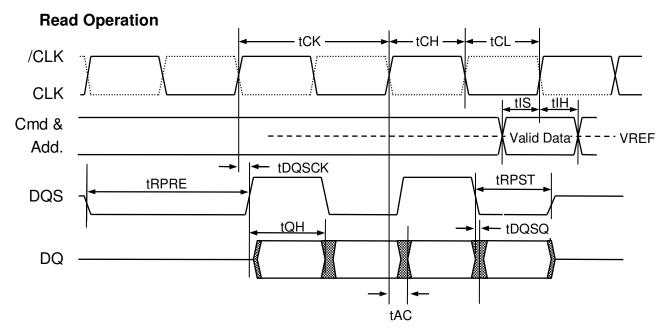

Write Operation / tDQSS=max.

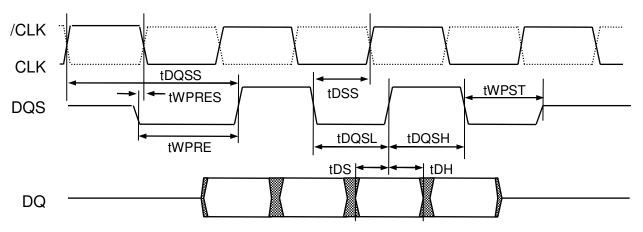

Write Operation / tDQSS=min.

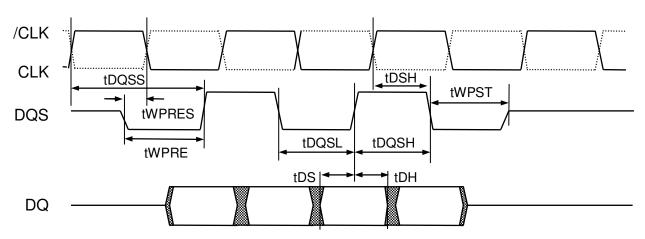



OPERATIONAL DESCRIPTION

BANK ACTIVATE

The DDR SDRAM has four independent banks. Each bank is activated by the ACT command with the bank addresses (BA0,1). A row is indicated by the row address A0-12. The minimum activation interval between one bank and the other bank is tRRD.

PRECHARGE

The PRE command deactivates the bank indicated by BA0,1. When multiple banks are active, the precharge all command (PREA,PRE+A10=H) is available to deactivate them at the same time. After tRP from the precharge, an ACT command to the same bank can be issued.

Bank Activation and Precharge All (BL=8, CL=2)

/CLK CLK 2 ACT command / tRCmin tRCmin ACT READ ACT **PRE** ACT Command **←** tRRD - tRP tRAS A0-9,11,12 Xb Y Xb tRCD BL/2 0 Xb A10 Xa Xb BA0,1 00 01 00 01 DOS DQ Precharge all


A precharge command can be issued at BL/2 from a read command without data loss.



READ


After tRCD from the bank activation, a READ command can be issued. 1st Output data is available after the /CAS Latency from the READ, followed by (BL-1) consecutive data when the Burst Length is BL. The start address is specified by A0-9(x8)/A0-8(x16), and the address sequence of burst data is defined by the Burst Type. A READ command may be applied to any active bank, so the row precharge time (tRP) can be hidden behind continuous output data by interleaving the multiple banks. When A10 is high at a READ command, the auto-precharge (READA) is performed. Any command(READ,WRITE,PRE,ACT) to the same bank is inhibited till the internal precharge is complete. The internal precharge starts at BL/2 after READA. The next ACT command can be issued after (BL/2+tRP) from the previous READA.

Multi Bank Interleaving READ (BL=8, CL=2)

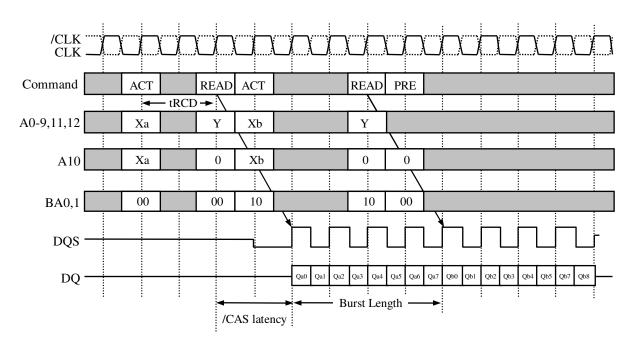



READ with Auto-Precharge (BL=8, CL=2,2.5,3.0)

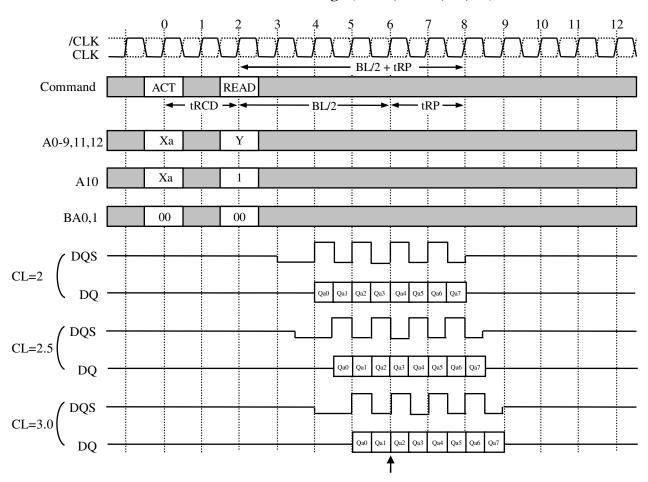


Internal Precharge Start Timing




WRITE

After tRCD from the bank activation, a WRITE command can be issued. 1st input data is set from the WRITE command with data strobe input, following (BL-1) data are written into RAM, when the Burst Length is BL. The start address is specified by A0-9(x8)/A0-8(x16), and the address sequence of burst data is defined by the Burst Type. A WRITE command may be applied to any active bank, so the row precharge time (tRP) can be hidden behind continuous input data by interleaving the multiple banks. From the last data to the PRE command, the write recovery time (tWRP) is required. When A10 is high at a WRITE command, the auto-precharge(WRITEA) is performed. Any command(READ,WRITE,PRE,ACT) to the same bank is inhibited till the internal precharge is complete. The next ACT command can be issued after tDAL from the last input data cycle.

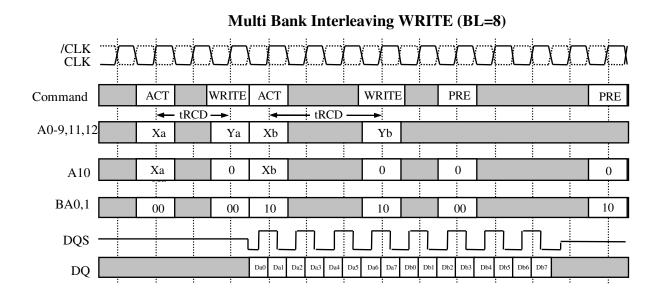



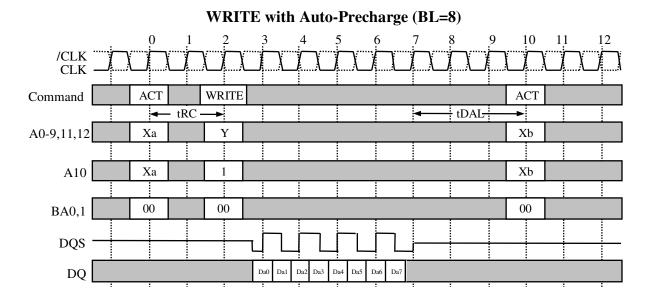




BURST INTERRUPTION

[Read Interrupted by Read]


Burst read operation can be interrupted by new read of any bank. Random column access is allowed. READ to READ interval is minimum 1CLK.

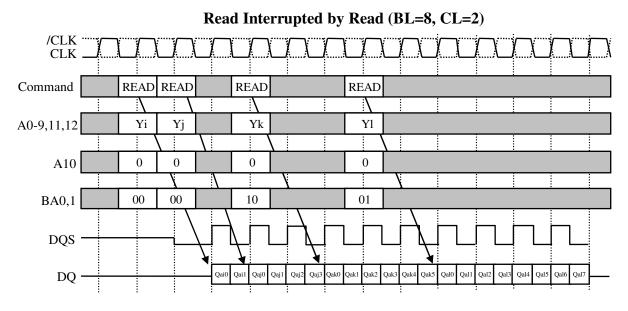


[Read Interrupted by precharge]

Burst read operation can be interrupted by precharge of the same bank. READ to PRE interval is minimum 1 CLK. A PRE command to output disable latency is equivalent to the /CAS Latency. As a result, READ to PRE interval determines valid data length to be output. The figure below shows examples of BL=8.


Read Interrupted by Precharge (BL=8)

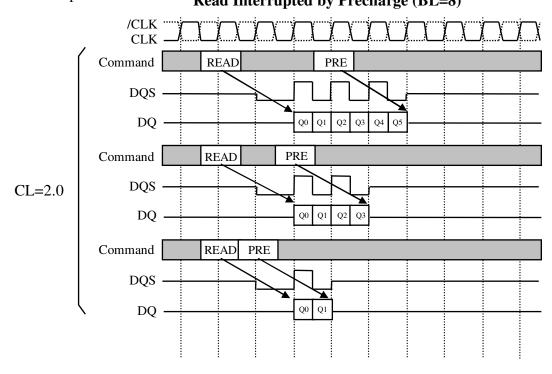



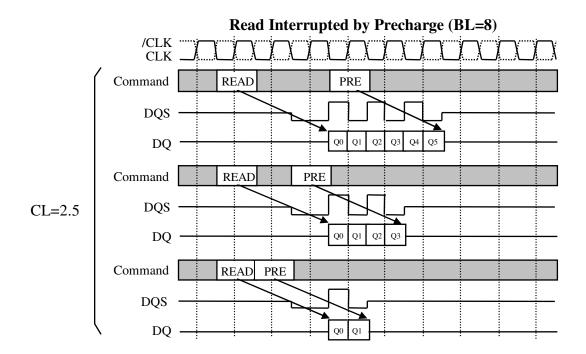

Read Interrupted by Precharge (BL=8)

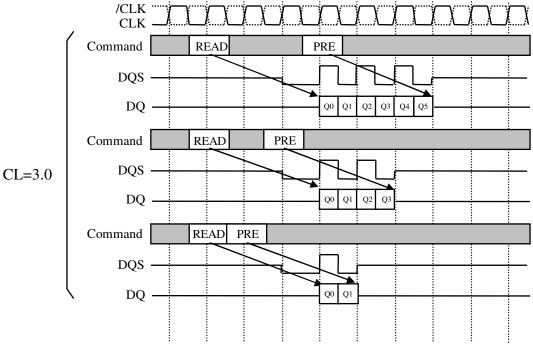



[Read Interrupted by Burst Stop]


DQS


DQ

Burst read operation can be interrupted by a burst stop command(TERM). READ to TERM interval is minimum 1 CLK. A TERM command to output disable latency is equivalent to the /CAS Latency. As a result, READ to TERM interval determines valid data length to be output. The figure below shows examples of BL=8.

Read Interrupted by TERM (BL=8) CLK **READ** TERM Command **DQS** Q1 Q2 Q3 Q4 DQ TERM READ Command CL=2.0 DQS DQ READ TERM Command DQS Q1 DQ READ TERM Command DQS Q1 Q2 DQ READ TERM Command DQS CL=2.5DQ READ TERM Command






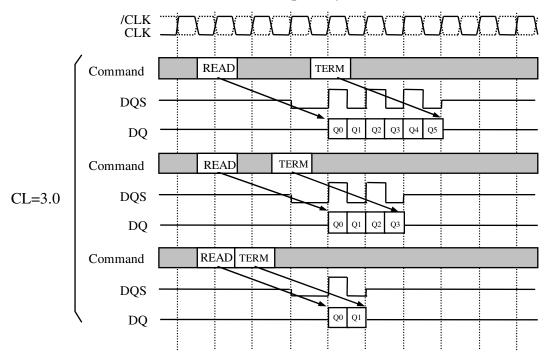

[Read Interrupted by Write with TERM]


Read Interrupted by TERM (BL=8)

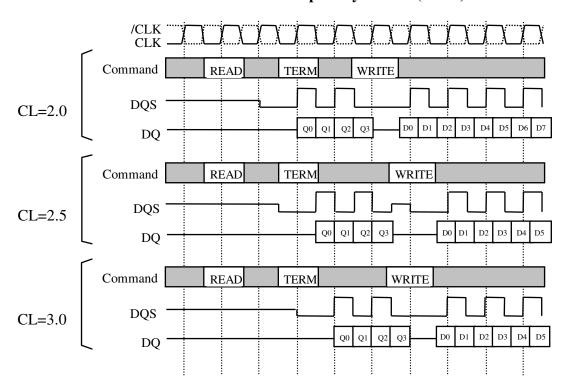




[Write interrupted by Write]

Burst write operation can be interrupted by write of any bank. Random column access is allowed. WRITE to WRITE interval is minimum 1 CLK.

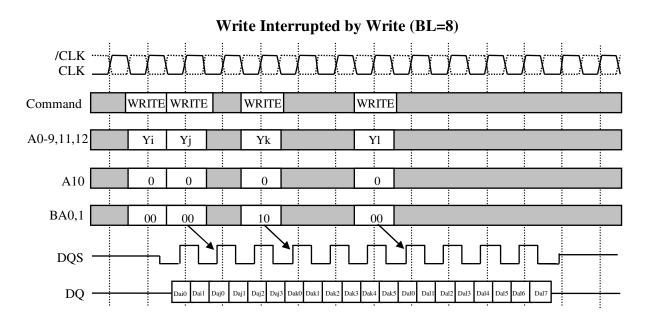

[Write interrupted by Read]


Burst write operation can be interrupted by read of the same or the other bank. Random column access is allowed. Internal WRITE to READ command interval(tWTR) is minimum 1 CLK. The input data on DQ at the interrupting READ cycle is "don't care". tWTR is referenced from the first positive edge after the last data input.

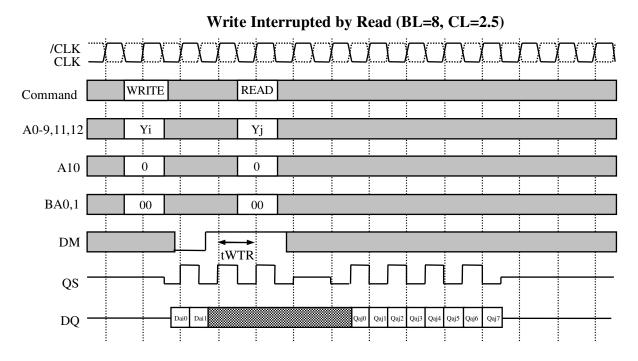




[Write interrupted by Precharge]

Burst write operation can be interrupted by precharge of the same or all bank. Random column access is allowed. tWR is referenced from the first positive CLK edge after the last data input.

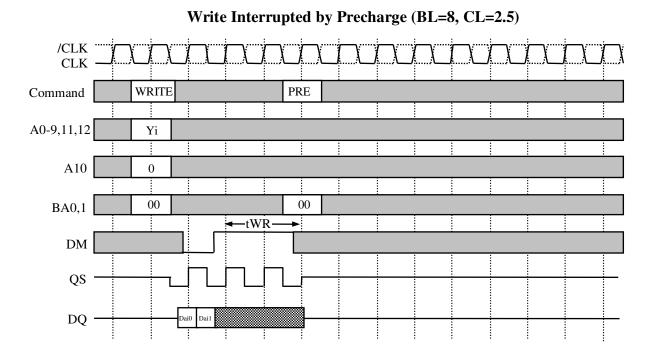




[Initialize and Mode Register sets]

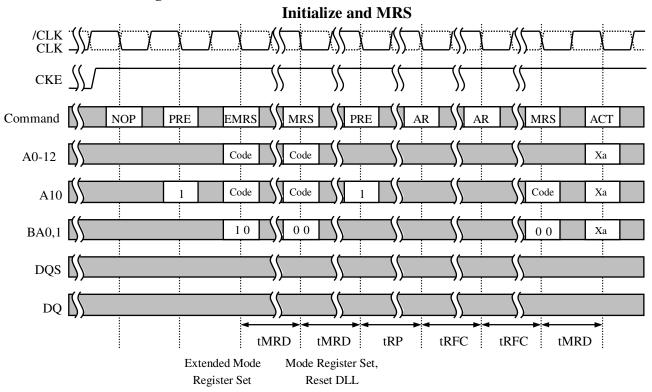

[AUTO REFRESH]


Single cycle of auto-refresh is initiated with a REFA(/CS=/RAS=/CAS=L,/WE=CKE=H) command. The refresh address is generated internally. 8192 REFA cycles within 64ms refresh 256Mbits memory cells. The auto-refresh is performed on 4 banks concurrently. Before performing an auto refresh, all banks must be in the idle state. Auto-refresh to auto-refresh interval is minimum tRFC . Any command must not be supplied to the device before tRFC from the REFA command.

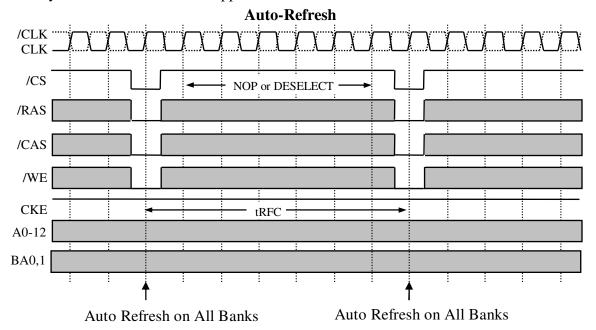



[SELF REFRESH]

Self-refresh mode is entered by issuing a REFS command (/CS=/RAS=/CAS=L,/WE=H,CKE=L). Once the self-refresh is initiated, it is maintained as long as CKE is kept low. During the self-refresh mode, CKE is asynchronous and the only enable input, all other inputs including CLK are disabled and ignored, so that power consumption due to synchronous inputs is saved. To exit the self-refresh, supplying stable CLK inputs, asserting DESEL or NOP command and then asserting CKE for longer than tXSNR/tXSRD.

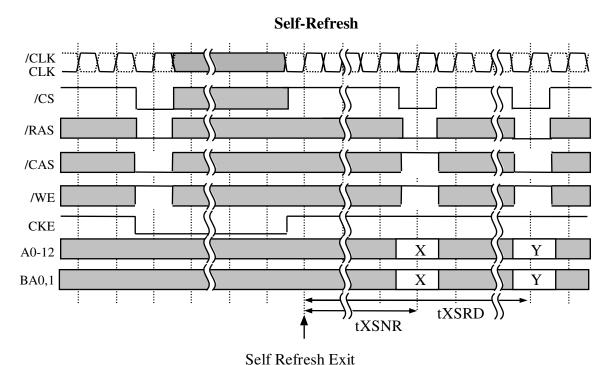


Sen Kenesh Exit




[Power DOWN]

The purpose of CLK suspend is power down. CKE is synchronous input except during the self-refresh mode. A command at cycle is ignored. From CKE=H to normal function, DLL recovery time is NOT required in the condition of the stable CLK operation during the power down mode.

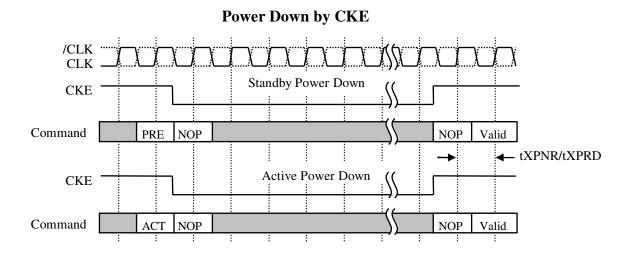

[DM CONTROL]

DM is defined as the data mask for writes. During writes, DM masks input data word by word. DM to write mask latency is 0.

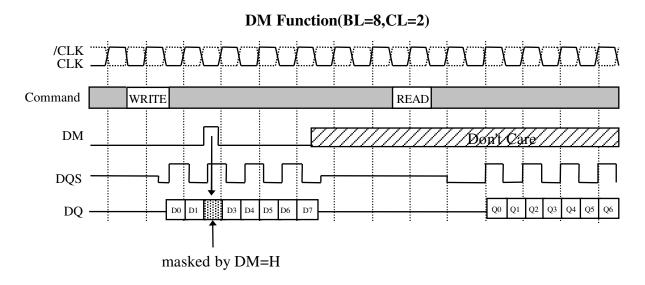



ORDERING INFORMATION - VDD = 2.5V

Commercial Range: 0°C to +70°C

Frequency	Speed (ns)	Order Part No.	Organization	Package
200 MHz	5	IS43R83200B-5TL	32Mx8	66-pin TSOP-II, Lead-free
		IS43R16160B-5TL	16Mx16	66-pin TSOP-II, Lead-free
		IS43R16160B-5BL	16Mx16	60-ball TF-BGA, Lead-free
166 MHz	6	IS43R83200B-6TL	32Mx8	66-pin TSOP-II, Lead-free
		IS43R16160B-6TL	16Mx16	66-pin TSOP-II, Lead-free
		IS43R16160B-6BL	16Mx16	60-ball TF-BGA, Lead-free


Industrial Range: -40°C to +85°C

Frequency	Speed (ns)	Order Part No.	Organization	Package
200 MHz	5	IS43R83200B-5TLI	32Mx8	66-pin TSOP-II, Lead-free
		IS43R16160B-5TLI	16Mx16	66-pin TSOP-II, Lead-free
		IS43R16160B-5TI	16Mx16	66-pin TSOP-II
		IS43R16160B-5BLI	16Mx16	60-ball TF-BGA, Lead-free
		IS43R16160B-5BI	16Mx16	60-ball TF-BGA
166 MHz	6	IS43R83200B-6TLI	32Mx8	66-pin TSOP-II, Lead-free
		IS43R16160B-6TLI	16Mx16	66-pin TSOP-II, Lead-free
		IS43R16160B-6BLI	16Mx16	60-ball TF-BGA, Lead-free
		IS43R16160B-6BI	16Mx16	60-ball TF-BGA


Automotive Range (A1): -40°C to +85°C

Frequency	Speed (ns)	Order Part No.	Organization	Package
166 MHz	6	IS46R83200B-6TLA1	32Mx8	66-pin TSOP-II, Lead-free
		IS46R16160B-6TLA1	16Mx16	66-pin TSOP-II, Lead-free
		IS46R16160B-6BLA1	16Mx16	60-ball TF-BGA, Lead-free



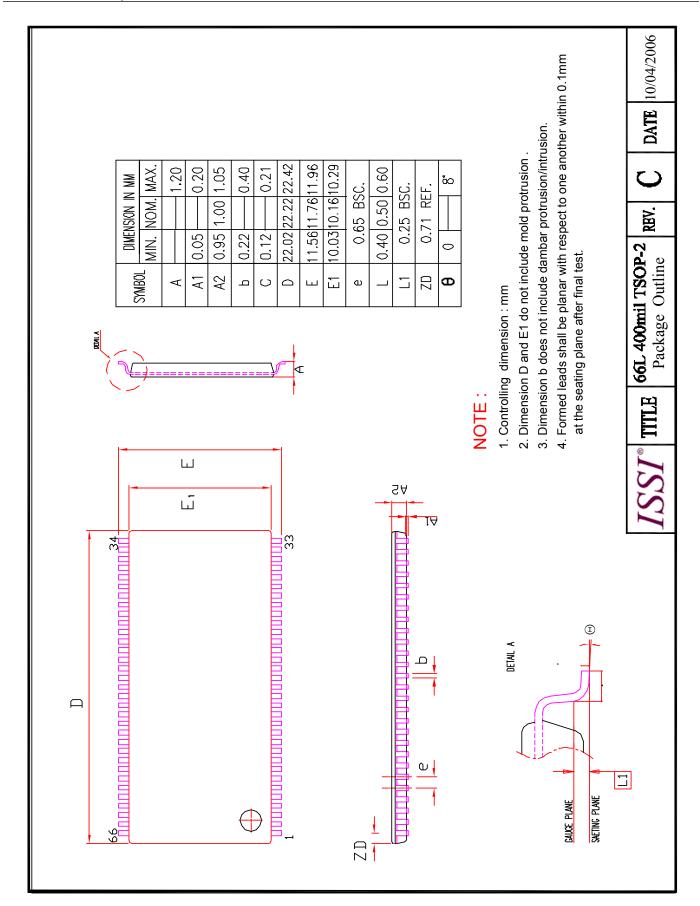



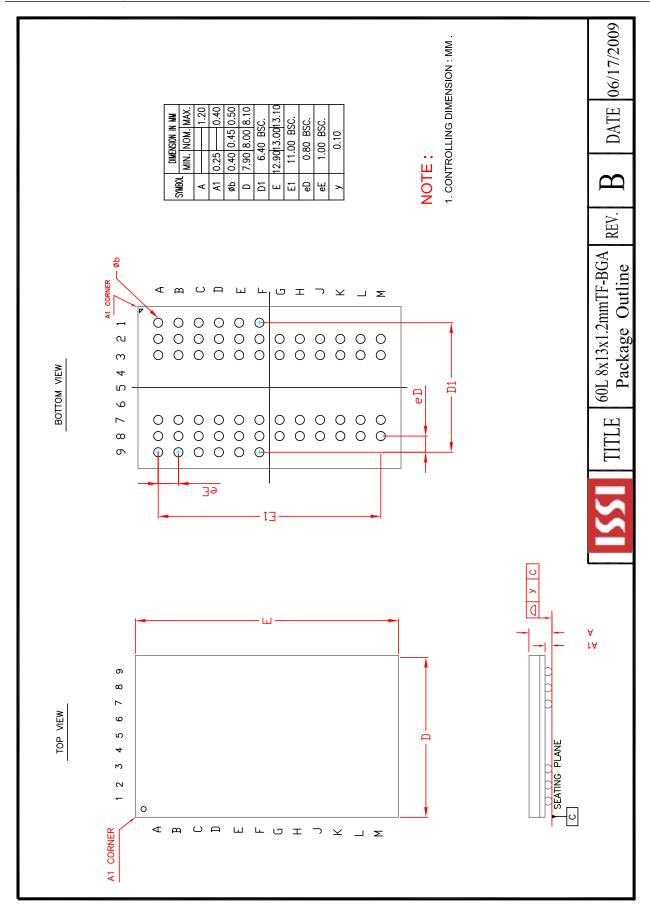

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

ISSI:

<u>IS43R16160B-6TL IS43R16160B-6TL-TR IS43R16160B-5TL IS43R16160B-5TL-TR IS43R16160B-5TLI IS43R16160B-5TLI-TR IS43R16160B-6TLI IS43R16160B-6TLI-TR IS43R16160B-5BLI IS43R16160B-5BLI-TR IS43R16160B-6BLI IS43R16160B-6BLI-TR IS43R16160B-6BLI-TR</u>